




# Czech Small Arms

## red dot sight mount adjustment

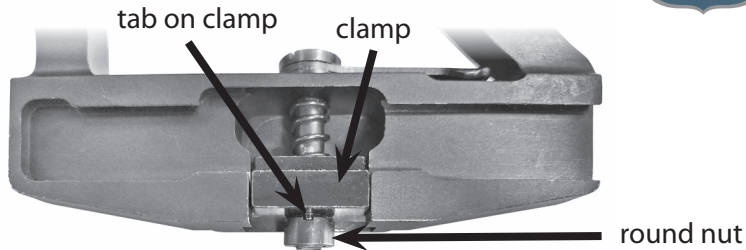

1. Push clamp to compress spring so round nut disengages tab on clamp.
2. Rotate round nut clockwise (right) to tighten clamp on side rail.  
Rotate round nut counter clockwise (left) to loosen.
3. Release clamp and ensure tab on clamp engages notch in round nut.

**Warning! This mount is intended for red dot sights only. Long scopes may get damaged by ejecting cases.**